



INSTRUCTION MANUAL
PROFESSIONAL ESPRESSO COFFEE MACHINES

SIXTIES - CLASSIC - BELLE EPOQUE



CONTENTS

GENERAL INSTRUCTIONS

A INTRODUCTION	7
B GENERAL RECOMMENDATIONS AND SAFETY REGULATIONS	8
C DESCRIPTION OF THE APPLIANCE	12
1 USER-MACHINE INTERFACE	12
2 COFFEE DISPENSING	14
3 STEAM DISPENSING	14
4 HOT WATER DISPENSING	14
5 CONTROL OF WATER LEVEL IN THE BOILER	15
6 CONTROL OF WATER TEMPERATURE IN THE BOILER	15
7 CONTROL OF COFFEES DOSAGE	15
8 MEASURING THE PRESSURE IN THE BOILER	15
9 MEASURING THE BREWING PRESSURE	15
10 MEASURING THE WATER SUPPLY PRESSURE	16
11 PROTECTING THE HEATING ELEMENTS	16
12 WARMING THE CUPS	16
13 BODY LIGHTING (Classic)	16
14 USER ALERTS	17
15 SOUND EMISSION	18
D TYPE APPROVALS	19
1 EUROPEAN TYPE APPROVALS	19
2 KOREA - AUSTRALIA - NEW ZELAND TYPE APPROVALS	19

OPERATION INSTRUCTIONS

A USE	21
1 SWITCHING ON THE APPLIANCE	21
2 SWITCHING ON THE LIGHTING (Classic)	21
3 NIGHT CYCLE	21
4 DISPLAY OF FUNDAMENTAL PARAMETERS	21
5 OPERATING PARAMETERS SETTING	22
5.1 COFFEE DOSES SETTING	22
5.2 GROUP 1 DOSES COPYING ON GROUP 2 AND 3	23
5.3 GROUPS CLEANING	24
5.4 NIGHT CYCLE SETUP	24
6 USE OF THE WORKING AREAS (Belle Epoque)	24
7 USE OF THE WORKING AREAS (Sixties - Classic)	24
8 COFFEE DISPENSING WITH MANUAL DOSING	24
9 COFFEE DISPENSING WITH AUTOMATIC DOSING	24
10 MAKING THE COFFEE	25
11 PREPARING FROTHY MILK	26
12 MAKING TEA - CAMOMILE TEA - ETC	26

B MAINTENANCE AND CLEANING	28
1 DAILY CLEANING OF THE GROUPS AND FILTERHOLDERS	28
2 DAILY CLEANING OF STEAM WANDS	28
3 WEEKLY CLEANING OF THE GROUPS	28
4 WEEKLY CLEANING OF THE FILTERS AND FILTERHOLDERS	29
5 WEEKLY CLEANING OF LOWER DRIP TRAY	29
6 WEEKLY CLEANING OF BODY	29
7 MONTHLY BOILER WATER CHANGING	29
C TROUBLESHOOTING	30
1 DISPENSING GROUP TEMPERATURE CONTROL FAULT ALARM	30
2 BREWING ALARM	30
3 ALARM: BUFFER BATTERY ABOUT TO GO FLAT	30
4 BOILER WATER LEVEL CONTROL ALARM, FAULT	31
5 THE MACHINE DOES NOT HEAT UP	31
6 STEAM DOES NOT COME OUT OF THE WAND WHEN THE MACHINE IS HOT	31
7 WATER COMES OUT OF THE STEAM WAND	31
8 WATER DOES NOT COME OUT OF THE DISPENSING GROUP WHEN THE MANUAL BUTTON IS USED	32
9 ONE DISPENSING GROUP STARTS UP ON ITS OWN (Belle Epoque)	32
10 ONE DISPENSING GROUP DOES NOT HEAT SUFFICIENTLY	32
11 BOILER PRESSURE UP TO 1.6 BAR	32
12 BREWING PRESSURE NOT BETWEEN 8 AND 9 BAR	32
13 THE DRIP TRAY IS FULL AND OVERFLOWING WITH WATER	32

D DISPOSAL OF THE APPLIANCE	33
------------------------------------	-----------

TECHNICAL INSTRUCTIONS

A UNPACKING	35
B INSTALLATION	36
1 WATER CONNECTION	36
2 DRAIN CONNECTION (Sixties - Classic)	36
3 DRAIN CONNECTION (Belle Epoque)	36
4 ELECTRICAL CONNECTIONS	37
4.1 SINGLE-PHASE 230VAC CONNECTION	37
4.2 THREE-PHASE 400VAC N3 CONNECTION	37
5 FILLING THE HYDRAULIC CIRCUITS	37
C ADJUSTMENTS	38
1 BASIC PROGRAMMING	38
1.1 TIME AND DATE SETTING	39
1.2 NIGHT CYCLE PROGRAMMING	40
1.3 BREWING TEMPERATURE SETTING	42
2 BREWING PRESSURE ADJUSTING	43



GENERAL INSTRUCTIONS

**THESE INSTRUCTIONS ARE INTENDED FOR
BARMAN / ESPRESSO COFFEE MACHINE OPERATOR AND
INSTALLATION / MAINTENANCE TECHNICIAN**

A INTRODUCTION

This manual applies to the entire range of professional coffee machines manufactured by ELEKTRA named Sixties (Deliziosa and Compact), Classic (Barlume 2 and 3 groups) and Belle Epoque (Vertical 2 and 3 groups).

This manual is divided in three parts as displayed below:

GENERAL INSTRUCTIONS

These instructions are intended for barman/espresso coffee machine operator and installation/maintenance technician

OPERATION INSTRUCTIONS

These instructions are intended for barman/espresso coffee machine operator

TECHNICAL INSTRUCTIONS

These instructions are intended for espresso coffee machine installation/maintenance technician

The instructions reported in this manual are also available in pdf format on the website www.elektrasrl.com

B GENERAL RECOMMENDATIONS AND SAFETY REGULATIONS

- 1 This booklet is an essential and integral part of the product and must be given to the user.
It contains basic safety instructions that must be followed for the installation, operation and maintenance of the appliance.
Save these instructions.
- 2 After having unpacked the appliance, make sure it is intact.
If in doubt, do not use the appliance and contact a qualified engineer. The packing elements (plastic bags, polystyrene foam, nails, etc.) should not be left within reach of children since they are potential sources of danger.
- 3 ⚠ **The appliance should be installed by a qualified engineer according to the manufacturer's instructions and in compliance with current safety regulations.**
Incorrect installation could cause injury to persons or animals and damage to property, for which the manufacturer cannot be held liable. The company Elektra declines any and all responsibility for tampering or interventions carried out by non authorized persons. Such intervention automatically renders the guarantee null and void ⚠.
The appliance must be installed only in places where its use and maintenance can be carried out by qualified personnel.
Before carrying out the electrical connection of the appliance, check that the mains electricity supply corresponds to the data given on the rating plate.
The rating plate is located on the front of the espresso coffee machine (Sixties and Classic models) or inside the cup heater tray (Belle Epoque models).
The wiring diagram is given on an adhesive tag applied to the end of the power cable.

⚠ **This appliance is only electrically safe when it has been connected to an efficient grounding system in compliance with current safety regulations ⚠.**

Make sure that this fundamental safety requirement has been observed and if in doubt request a thorough check of the system by a qualified electrician.

The manufacturer cannot be held liable for any damage that may be caused by failure to ground the appliance.

If the appliance does not have power cable with plug, at installation the appliance should be connected to the electricity supply through a multipolar linked switch having a contact separation of at least 3 mm in all poles, in compliance with current safety regulations.

Check that the current carrying capacity of the system is adequate for the maximum rated output of the appliance as indicated on the rating plate and, in particular, that the section of the cables is adequate for the power absorbed by the appliance. Unwind the whole power supply cable to prevent dangerous overheating.

It is forbidden the use of adapters, multiple current taps or extension cables.

This appliance should not be installed in kitchens.


- 4 For the operations of connection to the water supply network, comply with the provisions in this manual.
- 5 This appliance should only be used for the purpose for which it was designed. Any other use is to be considered as unsuitable and therefore dangerous.
The manufacturer cannot be held liable for any damage or injury caused by improper, wrong or unreasonable use.

⚠ The use of the appliance entails compliance with the following fundamental rules:

- the appliance should be used in environments where the temperature does not fall below 5 °C or rise above 40 °C;
- do not obstruct the intake and outlet grilles. In particular do not cover the upper cup tray with a cloth or such like.
- the appliance has a water circuit containing water, which must not be allowed to freeze otherwise the appliance could be damaged;
- the appliance should not be cleaned using water jets or installed in a place where water jets could be used for cleaning;
- the appliance should be installed on the level - it must not slope – high enough in order to have the cup heater tray at more than 1.5 meter from the floor.
- do not touch the appliance when hands or feet are wet or damp;
- do not operate the appliance barefoot;
- do not tug the power supply cable;
- do not expose the appliance to the elements (rain, sun, etc.): it is not suitable for outdoor use;
- The equipment can be used by children aged 8+ and people with reduced physical, sensory or mental capabilities, or lack of experience or knowledge required, provided they are under supervision or after they have received the same instructions for a safe use of the equipment and for understanding the dangers inherent in it.

Children should not play with the equipment.

The cleaning and maintenance intended to be performed by the user, should not be performed by children without supervision ⚠.

- 6 Disconnect the appliance from the mains electricity supply before carrying out any maintenance, by switching off at the mains switch or disconnecting the plug from the socket. Every time maintenance jobs are carried out on joints for connection to the water supply, you must strictly use new joints and the old joints must never be reused. To clean the appliance, follow the instructions in this booklet.
- 7 In the event of failure or malfunctioning of the appliance, switch it off and under no circumstances try to repair it yourself. Always request service by a qualified technician. Any repair, electrical or mechanical adjustment should only be carried out at the factory or by an authorized service center using only original spare parts. Failure to comply with these instructions could jeopardize the safety of the appliance. The supply cable of this appliance should not be replaced by the user. Should the cable be damaged, switch off the appliance and apply solely to a qualified electrician for replacement.
- 8 Should the machine be used no longer, it must be made inoperative by cutting the supply cable after having disconnected it from the electrical power supply. Make sure that all those parts which could be possible sources of danger are made harmless.
- 9 Warning: hot surfaces .

C DESCRIPTION OF THE APPLIANCE

The main functions of the machine, and its relative parts, are described below, with a view to ensuring its maximum performance.

1 USER-MACHINE INTERFACE

The machine can give the user a series of alerts through different LED light on/off combinations for each coffee dispensing button, on each of the two or three groups on the machine. In model Deliziosa the leds of the second pushbutton are located directly on the electronic unit and can be seen when the upper grille and cup heater is removed. Symbols are used in this manual to indicate these alerts as follows:

Group 1

Group 2

Group 3

Led all off:

○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○

Led of the single long coffee button of group 1 on with fixed light:

○ ● ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○

Led of the single long coffee button of group 1 flashing:

○ ✱ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○

Led of the single long coffee button of group 1 slowly fading light:

○ ● ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○

Slow sequence of led fixed light :

● ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○

Fast sequence of led fixed light:

● ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○

The inputs to the machine are executed by means of:

- Programming key



- Increasing pushbutton "+"





- Decreasing pushbutton "-"



- "ENTER" pushbutton



Communication is obtained by means of a series combinations of pushbuttons led lightings, explained for each argument as it follows.

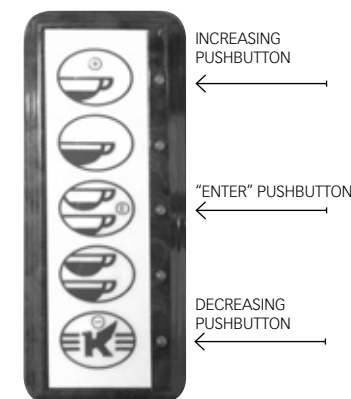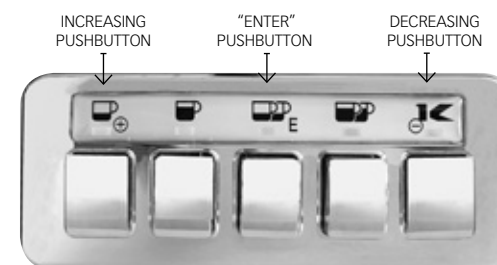

In general, therefore, the "+" key is used to select the topics or information required and both "+" and "-" keys are used to change the parameters, but always with the possibility to restore the initial situation.

Data are only saved definitively on pressing "ENTER".

2 COFFEE DISPENSING

Independent dispensing groups with programmed or manual coffee doses.

Each dispensing group has a heating circuit for brewing water working with an heat exchanger coupled to a boiler with the following capacity:

- | | | |
|----------------|------|-----------|
| - SIXTIES | 1 gr | 6 liters |
| - SIXTIES | 2 gr | 8 liters |
| - CLASSIC | 1 gr | 12 liters |
| - CLASSIC | 2 gr | 16 liters |
| - BELLE EPOQUE | 2 gr | 8 liters |
| - BELLE EPOQUE | 3 gr | 11 liters |

This circuit ensures that the dispensing group remains at a constant and optimal temperature even when it is not being used, thanks to the effect of the natural circulation of hot water flowing through the circuit itself.





The boiler water temperature setting determines consequently the brewing water temperature. Values from 72°C to 90°C about.

The machine is equipped with the following filter baskets for the coffee powder:

- 7 grams
- 9 grams (Optional)
- 17 grams
- 21 grams (Optional, with relevant filterholder)





3 STEAM DISPENSING

The machine has one or two steam valves equipped with swivel wands which allows the use of large milk containers and guaranteeing good general ergonomics.

The valves, marked with the two symbols   are operated by a joy-stick with movement in any direction in the Sixties models, or by an handle, opening with anti-clockwise rotation and marked with the two symbols   in the Classic and Belle Epoque models. The steam is produced by the same boiler used to heat the coffee water.

4 HOT WATER DISPENSING

The machine has one hot water valve equipped with a swivel wand which allows the use of large water containers and guaranteeing good general ergonomics.

The valve, marked with the two symbols   is operated by a joy-stick with movement in any direction in the Sixties models, or by an handle, opening with anti-clockwise rotation and marked with the two symbols   in the Classic and Belle Epoque models.

Water is taken from the same boiler used to heat the coffee water and to produce steam.

5 CONTROL OF WATER LEVEL IN THE BOILER

This is done by means of a level probe and of a solenoid valve what control the water level in the boiler, topping it up automatically when required.

6 CONTROL OF WATER TEMPERATURE IN THE BOILER

Water temperature in the boiler is controlled by a sensor that switches the heating elements through a remotely controlled power switch.

The temperature value is settable from 112.5°C to 128.3°C, standard factory value 122.5°C.

Consequently, it also controls the pressure in the boiler, kept from 0.6 bar to 1.6 bar, standard factory value 1.2 bar.

Consequently, it determines also the temperature of the coffee brewing water.

7 CONTROL OF COFFEES DOSAGE

Each group head is fitted with a flow rate sensor, or a volumetric dosage device.

It measures the volume of water being fed through the group, to ensure that the final volume of coffee in the cup corresponds to the value programmed by the user.

At the end, the final volume of coffee in the cup, in cubic centimetres (millilitres), corresponds to its weight in grams, since the specific weight of the extract being almost the same of the water.

To achieve this result, the device control system takes account of the quantity of water necessary to wet the coffee puck, quantity that does not reach the cup during the extraction, and adds it to the programmed quantity.

The quantity of water necessary to wet the coffee puck is preset at the factory, with the quantity of ground coffee as 6/8 grams for singles and 12/16 grams for doubles.

The dispensing capacity corresponding to these parameters is around 1 cc/second, ie obtained by grinding granulometry required for the Italian espresso.

When using different quantities of coffee or different grinding granulometry, kindly contact Technical Support.

8 MEASURING THE PRESSURE IN THE BOILER

The appliance is fitted with a pressure gauge that displays the steam pressure in the boiler.

9 MEASURING THE BREWING PRESSURE

The appliance is fitted with a pressure gauge that displays the pressure delivered by the pump during brewing.

Through the reading of the gauge, this enables technician to set manually the pump pressure during coffee dispensing.

10 MEASURING THE WATER SUPPLY PRESSURE

The same gauge referred to in the previous paragraph displays, when the water pump is stopped, the water supply pressure with which the appliance is fed.

11 PROTECTING THE HEATING ELEMENTS

The different appliance models are equipped with the following boiler heating elements:

- SIXTIES 1 gr N° 3 x 670W each one
- SIXTIES 2 gr N° 3 x 1170W each one
- CLASSIC 2 gr N° 3 x 1170W each one
- CLASSIC 3 gr N° 3 x 1840W each one
- BELLE EPOQUE 2 gr N° 3 x 1170W each one
- BELLE EPOQUE 3 gr N° 3 x 1670W each one

These heating elements are protected from overheating, obtained by means of a thermostat with manual reloading which controls the cutting off of power to the heating elements.

In each of following cases:

- Excessive duration of heating
- Exceeding of maximum allowable temperature value, the heating elements are disabled and a major fault is displayed on the pushbuttons.

12 WARMING THE CUPS

These models are equipped with cup heater trays with the capacity to contain a large number of cups on various levels and to keep them warm in order to guarantee an excellent cup of coffee.

The heat is generated by a natural flow of hot air from the inside of the machine.

13 BODY LIGHTING (Classic)

The machine is equipped with lighting on the sides and back of the body, which highlights its design features.

14 USER ALERTS

The machine can display the user the following ALERTS, by means of the pushbuttons leds:



(wait: machine is heating up)



(machine ready)



(machine in sleep mode - night cycle)



(example: group 2 dispensing of double short coffees in progress)

the following MINOR ALARMS:



(example: single short coffee group 1 brewing not satisfactory
- check coffee tamping or dosing or grinding)



(buffer battery about to go flat- replace promptly)

and the following MAJOR ALARMS:



(boiler water level control system fault - machine off - repair)



(brewing water temperature control system fault - machine off - repair)

15 SOUND EMISSION

The weighted sound emission levels of each machine models are the following:

- SIXTIES model:

Weighted sound emission levels A: 80dB uncertainty 1dB

- CLASSIC model:

Weighted sound emission levels A: 80dB uncertainty 1dB

- BELLE EPOQUE model:

Weighted sound emission levels A: 82dB uncertainty 1dB



D TYPE APPROVALS

1 EUROPEAN TYPE APPROVALS

Sixties, Classic and Belle Epoque models are in compliance with the applicable European Directives in force and, as such, they are marked with the symbol:



All products bearing this mark can be sold directly in all member states of the European Community.

To be entitled to apply the CE mark, the manufacturer must draw up a technical file which ELEKTRA will place at the disposal of its clientele for all the various kinds of technical controls.

The products are in compliance with the following Directives:

2001/95/EC	General safety
2004/1935/EC	Materials and objects in contact with food (MOCA)
2006/42/EC	Machinery
2011/65/EC	Restrictions on use of some dangerous material (ROHS)
2012/19/EU	Waste electric and electronic equipment (RAEE)
2014/30/EC	Electromagnetic compatibility
2014/35/EC	Electrical safety
2014/68/EU	Pressure equipment (PED)

2 KOREA - AUSTRALIA - NEW ZELAND TYPE APPROVALS

Sixties, Classic and Belle Epoque models are in compliance with Korean, Australian and New Zeland rules.



OPERATION INSTRUCTIONS

THESE INSTRUCTIONS ARE INTENDED FOR BARMAN/ESPRESSO COFFEE MACHINE OPERATOR

A USE

1 SWITCHING ON THE APPLIANCE

The machine switches on by pressing the button marked with the symbol ① placed on the working front of the same.

When the machine is switched on, it automatically loads water into the boiler and, only when the boiler is full, does it switch on the heating, so as not to damage the heating elements.

The following alerts are displayed by the pushbuttons:



(wait: machine is heating up)



(machine ready)

When switching on the machine all leds of all pushbuttons are flashing for 3 seconds, it means that the night cycle function is set on.

See paragraphs "3 NIGHT CYCLE" e "5.4 NIGHT CYCLE SETUP".

2 SWITCHING ON THE LIGHTING (Classic)

The body lighting turns on automatically when the machine is switched on.

3 NIGHT CYCLE

Through the setting of a time of day, the machine enters into a state of partial operation during which the temperature in the boiler is kept at a very low temperature (40°C).

In this state buttons with automatic dosing are not enabled, only the manual dosing buttons can be operated.

The following alert is displayed on the pushbuttons during the night cycle:



(machine in sleep mode - night cycle)

When this period of time has elapsed, the machine resumes normal operation.

See the following paragraphs.

Such cycle, as it does not cool down the machine completely, allows less scale deposits to accumulate in its hydraulic components and to save energy.

See following paragraph 5.4 and chapter "C ADJUSTMENTS", paragraph 1.2

4 DISPLAY OF FUNDAMENTAL PARAMETERS

The following operating parameters can be read on the dual pressure gauge:

- BOILER PRESSURE
- WATER SUPPLY PRESSURE (with pump off).
- BREWING PRESSURE (with pump on).

5 OPERATING PARAMETERS SETTING





It is allowed to set the following operating parameters of the appliance:



- GROUP 1 COFFEE BREWING DOSES PROGRAMMING
- GROUP 2 COFFEE BREWING DOSES PROGRAMMING
- GROUP 3 COFFEE BREWING DOSES PROGRAMMING
- GROUP 1 COFFEES DOSES COPYING ON GROUPS 2 AND 3
- GROUP 1 CLEANING
- GROUP 2 CLEANING
- GROUP 3 CLEANING
- NIGHT CYCLE SETUP

as for the following instructions:

5.1 COFFEE DOSES SETTING

It allows to record the desired doses on each of the four push buttons


   , independently for each group, starting from hot machine ready for use.

Switch the machine on by pressing the button marked with the symbol  keeping contemporaneously pressed the  button of the desired group.


All the buttons are programmed making one or two sample coffees with the desired dose, as per following procedure, for example on the group 1:

1 - The group 1 selection is displayed as shown below:




2 - Press the  button to display the group 1 single short coffee selection as shown below:




3 - Press the  button to display the group 1 single short coffee sample request as shown below (pressing on the contrary the "+" button you select group 1 single long coffee - see step 5):




4 - Make a sample coffee by pressing the group 1  button. Press the button again when the desired dose has been reached: the pushbutton led goes off, the dose is stored and you pass automatically to the group 1 single long coffee selection.

5 - The group 1 single long coffee selection is displayed as follows:




6 - Press the  button to display the group 1 single long coffee sample request as shown below (pressing on the contrary the "+" button you select group 1 double short coffees - see step 8):




7 - Make a sample coffee by pressing the group 1  button. Press the button again when the desired dose has been reached: the pushbutton led goes off, the dose is stored and you pass automatically to the group 1 double short coffees selection menu.

8 - The group 1 double short coffees selection is displayed as follows:




9 - Press the  button to display the group 1 double short coffee samples request as shown below (pressing on the contrary the "+" key you select group 1 double long coffees - see step 11):




10 - Make two sample coffees by pressing the group 1  button. Press the button again when the desired dose has been reached: the pushbutton led goes off, the dose is stored and you pass automatically to the group 1 double long coffees selection menu.

11 - The group 1 double long coffees selection is displayed as follows:

 



12 - Press the  button to display the group 1 double long coffee samples request as shown below:



13 - Make two sample coffees by pressing the group 1  button. Press the button again when the desired dose has been reached: the pushbutton led goes off, the dose is stored and the machine pass automatically to be ready for use.

5.2 GROUP 1 COFFEES DOSES COPYING ON GROUP 2 AND 3



To copy the coffee doses of group 1 on group 2 and 3 switch the machine on by pressing the button marked with the symbol  keeping contemporaneously pressed the  button of the group 1.

5.3 GROUPS CLEANING

See chapter "B MAINTENANCE AND CLEANING ", paragraph 3.

5.4 NIGHT CYCLE SETUP

It allows to set ON or OFF the night cycle function.

Switch the machine on by pressing the button marked with the symbol  keeping contemporaneously pressed the  button of the group 1.


6 USE OF THE WORKING AREAS (Belle Epoque)

With these models, it is possible to work with traditional espresso coffee cups of up to 2.76 inches in height (dispensing groups) and with containers of up to 4.92 inches in height (water and steam wands).

7 USE OF THE WORKING AREAS (Sixties and Classic)

With these models, it is possible to work with cups or containers of up to 3.94 inches in height (dispensing groups) and with containers of up to 5.71 inches in height (water and steam wands). Using raised work counters under the dispensing groups, it is possible to work with traditional espresso coffee cups of up to 2.76 inches in height.

8 COFFEE DISPENSING WITH MANUAL DOSES

This allows coffees of different lengths to be dispensed each time by pressing the  button and repressing the same button when the desired dose has been dispensed. This function is enabled at all times, irrespective of the machine status - even in the case of a major fault - so as to enable washing or checks during repair operations. The following alerts are displayed:



(Group 1 manual dispensing of coffee in progress)



(Group 2 manual dispensing of coffee in progress)



(Group 3 manual dispensing of coffee in progress)

9 COFFEE DISPENSING WITH AUTOMATIC DOSING

Allows the dispensing of coffee in preset doses.

This is carried out by pressing the buttons marked with the coffee symbol once only.

Dispensing stops automatically once the preset dose has been dispensed.

This function is only enabled when all the envisaged operating and protection conditions have been met and it can be stopped manually.

Alerts are displayed as per following example:



(Group 2 dispensing of double short coffees in progress)

10 MAKING THE COFFEE

Factors of basic importance to make good quality coffee are:

- Use of recently ground fresh coffee, because it rapidly loses its aroma and the fats contained turn rancid.
- Grinding of uniform size, which can be obtained only with good quality and well maintained coffee grinders. The uniform size of the powder ensures a complete extraction and a good reproducibility of the result in the cup.
- Use of properly warmed cups, which contribute considerably to preserving the cream of the infusion.

With the exception of the above-illustrated factors, there are many recipes to obtain many different types of infusions, based first of all on the type of coffee bean used, both for the production of mixes and as single-origin coffee.

The fundamental parameters are:

- Type of coffee bean used
- Grinding grade
- Quantity of powder used
- Infusion water temperature
- Infusion pressure

For example, in order to obtain a good Italian-style espresso coffee, grinding must allow the espresso to be dispensed in approx. 25 seconds and to have, on average, a volume equivalent to approx. 25 cc.

The quantity of ground coffee must be of around 7 grams.

Infusion temperature varies between 80°C and 95°C depending on the type of coffee used.

Infusion pressure between 8 and 9 bar.

- 1) Detach the filterholder from the dispensing group by turning it towards the left, and fill the filter with the dose of ground coffee.
- 2) Level it out and press it with the tamper.
Ensure that no grounds are left on the edges of the filter, in order to give the best pressure keeping and to preserve the life of the group gasket.
- 3) Attach the filterholder to the dispensing group, turning it firmly towards the right.
- 4) Place the cups underneath the spouts and start dispensing.
- 5) When the dispensing is finished leave the filterholder fixed on the group till a new dispensing.
- 6) When making a new coffee, discharge the coffee cake into the waste drawer without striking too hard so as not to damage the edge of the filter.

11 PREPARING FROTHY MILK

In order to froth up the milk, which is essential for preparing cappuccino, half-fill a tall, narrow container with milk and proceed as follows:

- 1) Briefly open the steam valve using the joy-stick marked with the symbols ☕ ☕ or the knob marked with the symbols ☕ ☕ so as to remove any water condensation that might have collected.
- 2) Place the container with the milk underneath the steam wand so that the spray nozzle touches the bottom, then reopen the steam valve and bring the milk to the desired temperature.
- 3) Lower the container so that the spray nozzle rises almost to the surface of the milk and, from this position, raise and lower the container repeatedly so that the spray nozzle enters and surfaces from the milk alternately.
Continue until the milk has frothed up, after that close the steam valve.

To make the cappuccino add hot espresso coffee to the hot frothy milk.

12 MAKING TEA – CAMOMILE TEA ETC

Put the container under the hot water nozzle and activate the hot water dispenser using the joy-stick marked with the symbols ☕ ☕ or the knob marked with the symbols ☕ ☕ .
Once the desired hot water volume is reached close the hot water valve.
At this point, use the hot water to make the drink of choice.





B MAINTENANCE AND CLEANING

1 DAILY CLEANING OF THE GROUPS AND FILTERHOLDERS



Each evening or at least once a day, clean the group shower and the filterholder gaskets with a cloth or a sponge. Rinse the filters and filterholders in boiling water in order to remove the fatty deposits of the coffee.
It is advisable to wash the inside of the filterholders and filters with a view to avoiding incrustations and coffee deposits which could fall off during coffee making, forming grounds in the cup.

2 DAILY CLEANING OF THE STEAM WANDS

 The steam wands, used for heating drinks, must be cleaned immediately after use in order to safeguard against the formation of incrustations that could block the holes of the spray nozzle and also to ensure that the residue of previously heated drinks does not deteriorate, leading to the unhygienic formation of bacteria .

Externally clean with a moist sponge, the steam nozzle immediately after every milk preparation cycle.



 
To clean the inside of the wand instead proceed as follows.

- 1) Fill a stainless steel pitcher with cold water up to at least the same level as the milk residuals on the wand.
- 2) Place the wand into the water filled pitcher.
- 3) Operate the steam valve using the joy-stick marked with the symbols  or the knob marked with the symbols  until the water boils, obtaining a complete disinfection of the wand.


3 WEEKLY CLEANING OF THE GROUPS

 At least weekly, it is necessary to clean internally the dispensing groups from coffee deposits through the following semi-automatic procedure guided by the machine .

That procedure is to be started independently for each group and only with hot machine ready to use.

- 1) Substitute the standard filter mounted on the filter holder of the group to be washed with the blind (non perforated) filter.
- 2) Insert an ELEKTRA clearing tablet in the blind filter and hook the filter holder on the group.
- 3) Switch the machine off by pressing the button marked with the symbol .
- 4) Switch the machine on by pressing the button marked with the symbol  keeping contemporaneously pressed the  button of the group to be washed, displaying the following alert:




- 5) Press the  button of the group to be washed to confirm the cleaning procedure: the cleaning starts, running 10 dispensing loops of 20 seconds each one.

At the end of washing cycle is displayed the following alert:



- 6) Hook off the filter holder and do not reconnect it.



- 7) Press the  button of the group to be washed: a rinsing step will get started, divided into 30 seconds of dispensing, 30 seconds of stop and 30 second of dispensing. On rinse completion the dispensing group will go back on normal functioning, ready to the use: remove the blind filter, place the standard filter back and hook the filter holder on the dispensing group.

4 WEEKLY CLEANING OF THE FILTERS AND FILTERHOLDERS

- 1) Place three teaspoons of detergent for coffee machines and approx. one litre of boiling water in a heat-resistant container.
- 2) Immerse the filters and filterholders in the solution prepared and allow them to soak for about 20/30 minutes.
- 3) Rinse thoroughly under running water.

5 WEEKLY CLEANING OF THE DRIP TRAY

At least once a week remove the lower cup grille, remove the lower drip tray and clean it.

 Check and clean the drain box too, removing any dregs with the aid of a teaspoon, and then rinse it .

6 WEEKLY CLEANING OF THE BODY


Simply use a damp (non abrasive) cloth.

Do not use alcohol or solvents to clean written or painted parts as this could damage them.


7 MONTHLY BOILER WATER CHANGING

Due to the fact that the boiler water is used also for the hot drinks, it is preferably to change it completely, to clean the boiler inside, minimum once a month.

- 1) When the machine has heated up, i.e. displaying the following alert:



switch it off by pressing the button marked with the symbol .

- 2) Operate the hot water valve marked with the symbol , after having placed a big pitcher underneath the water wand, and take off hot water from the boiler.
- 3) Continue to take off the water until it will finish, until it does not more come out of the wand.
- 4) Switch the machine on and wait it is ready for use, after having automatically refilled the boiler with water.

C TROUBLESHOOTING

⚠ If problems arise with the appliance, consult the following guide and try to resolve them by implementing the suggestions provided.

If the problems persist, contact Technical Assistance. Do not carry out repairs directly on the appliance ⚠.

The company Elektra declines any and all responsibility for tampering or interventions carried out by non authorized persons. Such intervention automatically renders the guarantee null and void.

The guide also contains problems that must be resolved directly by the Technical Assistance Service but which are explained to facilitate comprehension and repair operations.

1 BREWING WATER TEMPERATURE CONTROL SYSTEM ALARM, FAULT

If the following alert appears:



a major fault has occurred.

⚠ Switch off the machine and contact Technical Assistance ⚠.

2 BREWING ALARM

If, after dispensing selected with an automatic button, e.g. group 1 single short coffee, the following alert is displayed:



the coffee may not have been made according to Italian espresso standards, and therefore adjustments in tamping, dosing or grinding of the coffee powder are required.

Perhaps even adjustments to temperature or brewing pressure are required (also consult chapters "C - ADJUSTMENTS", paragraphs 1.3 and 2).

Alternatively, there might be a fault due to:

- Water supply stoppage: restore it.
- Fault or obstruction to the passing of water through some parts of the machine: contact Technical Assistance.

3 ALARM: BUFFER BATTERY ABOUT TO GO FLAT

The electronic control unit is equipped with a buffer battery that ensures the storing of the time and date.

The system continually controls the efficiency of the battery, warning in advance when it is about to go flat and advising its replacement.

When displaying the following alert:



Contact Technical Assistance.

4 BOILER WATER LEVEL CONTROL ALARM, FAULT

If the following alert appears:



the fault could be due to:

- Water supply stoppage: restore it
- Fault in the boiler water inlet solenoid valve or obstruction to the passing of water through some parts of the machine.
- Electrically insulating incrustations on the level probe or an interruption in its electrical connection that prevents the presence of water in the boiler from being detected:

⚠ Switch off the machine and contact Technical Assistance ⚠.

5 THE MACHINE DOES NOT HEAT UP

Due to the (even temporary) lack of water in the boiler the heating element safety device may have been deactivated.

⚠ The heating element safety device can be manually reactivated, after the reason for the lack of water in the boiler has been eliminated or repaired ⚠.

Contact Technical Assistance.

6 STEAM DOES NOT COME OUT OF THE WANDS WHEN THE MACHINE IS HOT

This problem normally arises after the machine has been switched on from cold and is due to the sticking of the vacuum break valve of the boiler; this does not negatively affect the use of the machine, in fact:

- After venting all the air through a steam valve, wait until the machine heats up normally and use it.

In the meantime, contact Technical Assistance.

7 WATER COMES OUT OF THE STEAM WAND

This means that the boiler is completely full of water instead of containing a certain quantity of steam.

The possible causes of this are:

- Fault in the boiler water inlet solenoid valve.
- Electrically insulating incrustation on the level probe or interruption in its electrical connection.

⚠ Spegnere la macchina, chiudere la rete idrica e rivolgersi all'Assistenza Tecnica ⚠.

8 WATER DOES NOT COME OUT OF A DISPENSING GROUP WHEN THE MANUAL BUTTON IS USED

The possible causes of this are:

- Coffee ground too finely: adjust it.
- Water supply stoppage: restore it.
- Fault or obstruction to the passing of water through some parts of the machine: contact Technical Assistance.

9 A DISPENSING GROUP STARTS UP ON ITS OWN (Belle Epoque)

The pushbutton membrane has a damaged button or water has entered it.

- Identify the faulty button and, by switching it off and on repeatedly, try to disable it and do not use it any more.
 - Make the water inside the membrane evaporate by drying it with a hair dryer.
- In the meantime, contact Technical Assistance.

10 ONE DISPENSING GROUP DOES NOT HEAT SUFFICIENTLY

There is a reduction to the flowing of the brewing water, e.g.:

- Group natural heating circuit clogged with scale deposits.

Contact Technical Assistance.

11 BOILER PRESSURE UP TO 1.6 BAR

If the boiler pressure goes up to 0.16 MPa (1.6 bar), the possible causes of this are:

- Fault in the brewing temperature control system
- Calibration problem with the pressure gauge.

⚠ Switch off the machine and contact Technical Assistance ⚠.

12 BREWING PRESSURE NOT BETWEEN 8 AND 9 BAR

Unless this value exceeds 1.2 MPa (12 Bar), in which case switch off the machine and contact Technical Assistance, this is a fault that does not negatively affect the use of the machine.

The most likely causes are that the pump is out of calibration or worn.

Contact Technical Assistance.

13 THE DRIP TRAY IS FULL AND OVERFLOWING WITH WATER

- 1) Clean the drain box and use a metal wire to free the drain pipe of residue.
- 2) Eliminate any sagging or strangling of the flexible drain pipe, ensuring that it is always angled downwards in a straight and even manner.
- 3) If the above-mentioned causes are not responsible for the fault, this means that there is a blockage in the drain pipes external to the machine: contact a plumber.

Also consult chapter "B - INSTALLATION", paragraphs 2 and 3.



D DISPOSAL OF THE APPLIANCE

The European Directive 2012/19/EU (WEEE) covering the disposal of electric and electronic equipment dictates that such equipment must not be disposed of through normal solid urban waste channels.

⚠ When such equipment has reached the end of its useful life, the user is bound take to deliver it to authorized segregated waste collection centres or return it to the dealer on purchasing a new equivalent type of appliance, on a one-to-one ratio ⚠.

For further information on segregated waste collection centres, contact a dealer or the appropriate public authorities.

Effective segregated waste collection designed to subject the disposed equipment to environmentally compatible recycling, processing and disposal processes contributes to the avoidance of negative effects on the environment and on health, and enables the re-use of the materials of which the appliance is composed.

Improper disposal of the product by the user is punishable according to the penalties laid down in the legislation in force.

The crossed-out wheellie bin symbol indicates that the product must be handled as described above



TECNICAL INSTRUCTIONS

THESE INSTRUCTIONS ARE INTENDED FOR ESPRESSO COFFEE MACHINE INSTALLATION/MAINTENANCE TECHNICIAN

A UNPACKING

Packaging is carried out with the aim of protecting the machine from damage during transportation.

The packaging materials used are recyclable. They are, therefore, chosen according to environmental protection criteria and ease of disposal, the latter process being geared at further integration in productive cycle materials.

Thanks to this mechanism, not only is the volume of waste reduced but a more rational use of non renewable resources is also ensured.

- 1) Cut the strap that keeps the box closed.
- 2) Open the top of the box and remove the shock-proof panels inside, remove the accessories contained inside them and take out the present manual, keeping these articles to hand for the later phases of use of the appliance.
- 3) ⚠ Remove the nylon bag covering the upper part of the machine and put it in a safe place out of the reach of children ⚠.
- 4) Drive the box up out leaving the machine on the pallet.
- 5) Remove any other packaging materials and protections attached to the machine.
- 6) ⚠ Hand the packaging materials over to an authorized enterprise for disposal and recycling ⚠.

B INSTALLATION

1 WATER CONNECTION

The water is fed thanks to a connection with the drinkable water supply at a minimum pressure of 0.15 MPa (1.5 bar) and a maximum pressure of 0.6 MPa (6 bar).

Hardness of the water not above 20°F.

Were the hardness should be higher than the above value, install a water softener between the water supply and the machine.

Should the water supply pressure exceed 0.6 MPa (6 bar), install a pressure reducer upline of the coffee machine / water softener system.

An external check-valve may be required to meet local regulations.

The machine has a flexible steel-braided connection pipe with a 3/8 female connection, approx. 1.7 metres in length.

- 1) Connect the flexible pipe to the coupling located on the bottom of the machine.
- 2) Connect this flexible tube to the water softener, if present, or directly to the water supply (water mains).

2 DRAIN CONNECTION (Sixties e Classic)

The machine has two rubber connecting pipes, one of 20 mm in external diameter and the other of 18 mm in external diameter, both approx. 1.5 metres in length.

These flexible pipes must be made to flow into a fixed drain manifold with a minimum internal diameter of 50 mm located underneath the machine work counter.

The space created by difference in diameter of the two pipes inserted into the drain manifold must be left free for the venting of air during the discharging of the water.

- 1) Hook up the rubber pipe of 20 mm in diameter to the pipe fitting on the plastic drain box installed at the bottom of the machine and insert it into the drain manifold, ensuring that it does not sag and that it is not strangled.
- 2) Hook up the rubber pipe of 18 mm in diameter to the metal pipe fitting on the bottom of the machine and insert it into the drain manifold, ensuring that this too does not sag and that it is not strangled.

3 DRAIN CONNECTION (Belle Epoque)

The machine has one rubber connecting pipe of 20 mm in external diameter, approx. 1.5 metres in length.

This flexible pipe must be made to flow into a fixed drain manifold with a minimum internal diameter of 35 mm located underneath the machine work counter.

The space created by difference in diameter of the pipe inserted into the drain manifold must be left free for the venting of air during the discharging of the water.

- 1) Hook up the rubber pipe of 20 mm in diameter to the metal pipe fitting installed at the bottom of the machine and insert it into the drain manifold, ensuring that it does not sag and that it is not strangled.

4 ELECTRICAL CONNECTIONS

The machine is equipped with a connecting power cable, approx. 2 metres in length, with 5 wires of the following colours:

- Green/Yellow:	Ground
- Blue:	Neutral
- Brown:	Phase 1
- Black:	Phase 2
- Grey:	Phase 3

 **The wires should be connected only to a terminal board on the electric switchboard** 

The wiring diagram is shown on an adhesive tag applied to the end of the power cable. Electrical power specifications are given on the plate applied to the front of the machine (Sixties and Classic) or inside of the upper cup tray (Belle Epoque).

The connection may be made without any modification being required to the machine, either to a single-phase 230VAC power supply or to a triple phase 400VAC N3 power supply, as follows:

4.1 SINGLE-PHASE 230VAC CONNECTION

Hook up the Ground and Neutral wires to the two respective terminals on the electric switchboard.


Join up the three wires of phases 1, 2 and 3 themselves and connect them to the single terminal of the phase present in the electric switchboard.

4.2 THREE-PHASE 400VAC N3 CONNECTION

Hook up the Ground and Neutral wires to the two respective terminals on the electric switchboard.

Connect each of the three wires of phases 1, 2 and 3 to the respective terminals of the phases present in the electric switchboard.

5 FILLING THE HYDRAULIC CIRCUITS

- 1) Ensure that the water supply is turned on.
- 2) Switch on the machine.
- 3) Activate the manual dispensing of each group by pressing the button  of the pushbutton, until complete elimination of the air contained in the water circuits and regular outflow of water.

C ADJUSTMENTS

1 BASIC PROGRAMMING

This enables the implementation of some of the Adjustment and Maintenance functions listed below.

It also facilitates the providing of telephonic assistance

⚠ **Basic Programming is the exclusive responsibility of the installer/service technician** ⚠
It is carried out with the key provided, which enables you to use the following menu of led codes on the pushbuttons:

- Time setting:

☀ ● ● ● ● ○ ○ ○ ○ ○ ○ ○ ○ ○ ○

- Night cycle programming:

● ☀ ● ● ● ○ ○ ○ ○ ○ ○ ○ ○ ○ ○

- Brewing temperature setting:

● ● ☀ ● ● ○ ○ ○ ○ ○ ○ ○ ○ ○ ○

- 1) Insert the key in the lock on the control panel, gently press and turn it clockwise: the machine automatically enters a state of partial operation suitable for programming.
- 2) Press any of the coffee buttons marked with the ☐₊ symbol to scroll the menu to find the required topic.
- 3) Press any of the coffee buttons marked with the ☐_E symbol to confirm the choice of topic and access further instructions.
To change numerical values press the ☐₊ and ☐₋ buttons to increase or decrease respectively. Then save the data by pressing any of ☐_E buttons.
- 4) Upon completing programming or consultation of the various topics, turn the key counter-clockwise and remove it from the lock: the machine automatically resumes full operation.

Carefully follow step by step the instructions given below, as they provide a complete guide to programming:

1.1 TIME SETTING

This function lets you set the current time, which is needed to manage the night cycle correctly.

- Insert and turn the key to access the following time setting menu:

☀ ● ● ● ● ○ ○ ○ ○ ○ ○ ○ ○ ○ ○

- Press the ☐_E button to display the current time as shown below (pressing on the contrary the "+" key you move on to the "night cycle programming" menu - see paragraph 1.2):

○ ● ● ● ● ☐₊ ☐₊ ☐₊ ☐₊ ○ ○ ○ ○ ○

○ ○ ○ ○ ○	0
○ ○ ○ ○ ●	1
○ ○ ○ ● ○	2
○ ○ ○ ● ●	3
○ ○ ● ○ ○	4
○ ○ ● ● ○	5
○ ○ ● ● ●	6
○ ○ ● ○ ○	7
○ ○ ● ○ ●	8
○ ○ ● ○ ○	9
○ ○ ● ● ○	10
○ ○ ● ● ●	11
○ ○ ● ○ ○	12
○ ○ ● ○ ●	13
○ ○ ● ○ ○	14
○ ○ ● ● ○	15
○ ○ ○ ○ ○	16
○ ○ ○ ○ ●	17
○ ○ ○ ● ○	18
○ ○ ○ ● ●	19
○ ○ ○ ○ ○	20
○ ○ ○ ○ ●	21
○ ○ ○ ● ○	22
○ ○ ○ ● ●	23

Select the time using the buttons "+" or "-" and then press the button ☐_E to confirm. This confirmation takes you automatically to the "night cycle programming" menu: see paragraph 1.2.


1.2 NIGHT CYCLE PROGRAMMING

Through the setting of a time of day, the machine enters into a state of partial operation during which the temperature in the boiler is kept at a very low temperature (preheating temperature) and buttons with automatic dosing are not enabled. Only the manual dosing buttons can be operated. When this period of time has elapsed, the machine resumes normal operation.

- Insert and turn the key.
- Press a "+" button once to access the "night cycle programming" menu as shown below (pressing again the "+" button you move on to the "brewing temperature setting" menu - see paragraph 1.3):

- Press the button to display the night cycle start time as shown below:


○	○	○	○	○	0
○	○	○	○	●	1
○	○	○	●	○	2
○	○	○	●	●	3
○	○	●	○	○	4
○	○	●	○	●	5
○	○	●	●	○	6
○	○	●	●	●	7
○	●	○	○	○	8
○	●	○	○	●	9
○	●	○	●	○	10
○	●	○	●	●	11
○	●	●	○	○	12
○	●	●	○	●	13
○	●	●	○	○	14
○	●	●	●	●	15
●	○	○	○	○	16
●	○	○	○	●	17
●	○	○	●	○	18
●	○	○	○	●	19
●	○	●	○	○	20
●	○	●	○	●	21
●	○	●	●	○	22
●	○	●	●	●	23

Select the required 'night cycle start time' using the buttons "+" or "-" and then press the  button to confirm.

This confirmation puts you automatically in the night cycle end time, displayed as follows:

● ● ● ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○

Figure 1 shows a 5x24 grid of nodes, represented by circles. Each circle is either black (0) or red (1). The grid is organized into 5 columns and 24 rows. The nodes are arranged in a pattern that changes over time, with red nodes appearing in various positions across the 24 rows and 5 columns.

Select the required night cycle end time using the buttons "+" or "-" and then press the  button to confirm.


This confirmation puts you automatically in the “brewing temperature setting” menu: see paragraph 1.3.

1.3 BREWING TEMPERATURE SETTING

This allows the brewing temperature to be varied according user requirements, the blend being used or environmental conditions, with a view to obtaining the best "quality in the cup". This is done by setting the required increase (or decrease) of the temperature in relation to the standard brewing temperature, measured in centigrade degrees (°C). The standard brewing temperature is that programmed by the manufacturer and is the same for all produced pieces of this model.

- Insert and turn the key
- Press a "+" button two times to access the following "brewing temperature setting" menu:



- Press the  button to display the increase/decrease of standard brewing temperature in °C as follows:



○ ● ○ ● ○	-10
○ ● ○ ● ●	-9
○ ● ○ ● ○	-8
○ ○ ○ ● ●	-7
○ ○ ○ ● ●	-6
○ ○ ○ ● ●	-5
○ ○ ○ ● ○	-4
○ ○ ○ ● ●	-3
○ ○ ○ ○ ○	-2
○ ○ ○ ○ ○	-1
○ ○ ○ ○ ○	0
● ○ ○ ○ ●	+1
● ○ ○ ● ○	+2
● ○ ○ ● ●	+3
● ○ ○ ○ ○	+4
● ○ ○ ○ ●	+5
● ○ ○ ● ○	+6

Select the required increase (or decrease) using the buttons "+" or "-" and then press the  button to confirm.

This confirmation puts you automatically in the "time setting" menu: see paragraph 1.1.


2 BREWING PRESSURE ADJUSTING

With a view to obtaining the best "quality in the cup", brewing pressure may be adjusted. Recommended pressure is between 0.8 MPa (8 bar) and 0.9 MPa (9 bar).

For Sixties and Classic models disassemble the upper drip tray unscrewing it. Inside the machine is placed the pump adjustable with a long screwdriver.

For Belle Epoque model proceed as it follows:

- 1) Disassemble the dome covering the cups, unscrewing it.
- 2) Disassemble the two vertical decorating bonds, unscrewing them.
- 3) Disassemble the back body, unscrewing it.

Make a coffee on the right dispensing group by pressing the  button: the gauge display the brewing pressure; proceed adjusting the pressure.



ELEKTRA SRL

VIA A. VOLTA, 18 - 31030 DOSSON DI CASIER (TREVISO) ITALY

TEL. (+39) 0422 490405 R.A. - FAX (+39) 0422 490620

E-mail: info@elektrasrl.com - Website: www.elektrasrl.com